



2003 Maintenance Schedule A4

	Miles	10	20	30	40	50	60	70	80	90	100	105
Kilometers		16	32	48	64	80	96	112	128	144	160	170
Engine Oil – change		•	•	•	•	•	•	•	•	•	•	
Engine Oil Filter – replace		•	•	•	•	•	•	•	•	•	•	
Engine - check for leaks		•		•		•		•		•		•
Cooling System – check level, add if necessary		•	•	•	•	•	•	•	•	•	•	
Exhaust System – check for damage, leaks		•	•	•	•	•	•	•	•	•	•	
Engine OBD – check memory, purge		•	•	•	•	•	•	•	•	•	•	
Door Hinge Mechanisms – lubricate		•	•	•	•	•	•	•	•	•	•	
Battery – check electrolyte, add if necessary		•	•	•	•	•	•	•	•	•	•	
Wiper/Washer– check fluid, add if necessary		•	•	•	•	•	•	•	•	•	•	
Automatic Shift Lock – check		•	•	•	•	•	•	•	•	•	•	
Manual Transmission – check shift and interlock												
		•	•	•	•	•	•	•	•	•	•	
Tires & Spare – check condition, pressure		•	•	•	•	•	•	•	•	•	•	
Service Reminder Display– reset		•	•	•	•	•	•	•	•	•	•	
Brake System – check		•	•	•	•	•	•	•	•	•	•	
Drive Shaft Boots – check		•	•	•	•	•	•	•	•	•	•	
Road Test		•	•	•	•	•	•	•	•	•	•	
Lights – check		•	•	•	•	•	•	•	•	•	•	
Front Axle – check dust seals, ball joints, tie rod ends			•		•		•		•		•	
Automatic Transmission – check for leaks			•		•		•		•		•	
Automatic Transmission Final Drive – check for leaks					•				•		•	
Manual Transmission – check for leaks			•		•		•		•		•	
Manual Transmission Final Drive – check for leaks			•		•		•		•		•	
Multitronic Transmission - change ATF					•				•			
Power Steering Fluid – check, add if necessary					•				•			
Dust/Pollen Filter – replace			•		•		•		•		•	
Headlights – inspect, adjust if necessary			•		•		•		•		•	
Sliding Roof – clean, lubricate rails			•		•		•		•		•	
Air Cleaner – replace filter element					•				•			
Spark Plugs – replace					•				•			
Ribbed Belt – replace									•			
Ribbed Belt – check* **												•
Timing Belt – replace* **												•
Timing Belt – inspect****					•				•			
Timing Belt and Tensioner Roller – replace***												•

* 1.8T ** 3.0L ***2.7L ****A4 1.8L every 40,000 miles
 Brake Fluid - replace every 2 years, regardless of mileage.
 Cloth Top – check rollover function every 2 years, regardless of mileage.



2003 Maintenance Schedule

A6/S6/allroad

	Miles	10	20	30	40	50	60	70	80	90	100	105
Kilometers		15	30	45	60	75	90	105	120	135	150	155
Engine Oil – change		•	•	•	•	•	•	•	•	•	•	
Engine Oil Filter – replace		•	•	•	•	•	•	•	•	•	•	
Engine – check for leaks			•		•		•		•		•	
Cooling System – check level, add if necessary		•	•	•	•	•	•	•	•	•	•	
Exhaust System – check for damage, leaks		•	•	•	•	•	•	•	•	•	•	
Engine OBD – check memory, purge		•	•	•	•	•	•	•	•	•	•	
Door Hinge Mechanisms – lubricate		•	•	•	•	•	•	•	•	•	•	
Battery – check electrolyte, add if necessary		•	•	•	•	•	•	•	•	•	•	
Wiper/Washer – check fluid, add if necessary		•	•	•	•	•	•	•	•	•	•	
Automatic Shift Lock – check		•	•	•	•	•	•	•	•	•	•	
Manual Transmission – check shift and interlock		•	•	•	•	•	•	•	•	•	•	
Tires and Spare – check condition, pressure		•	•	•	•	•	•	•	•	•	•	
Service Reminder Display – reset		•	•	•	•	•	•	•	•	•	•	
Brake System – check		•	•	•	•	•	•	•	•	•	•	
Drive Shaft Boots – check		•	•	•	•	•	•	•	•	•	•	
Road Test		•	•	•	•	•	•	•	•	•	•	
Lights – check		•	•	•	•	•	•	•	•	•	•	
Front Axle – check dust seals, ball joints, tie-rod ends			•		•		•		•		•	
Automatic Transmission – check for leaks			•		•		•		•		•	
Automatic Transmission Final Drive – check for leaks			•		•		•		•		•	
Manual Transmission – check for leaks			•		•		•		•		•	
Manual Transmission Final Drive – check for leaks			•		•		•		•		•	
Multitronic™ Transmission – change ATF					•				•			
Power Steering Fluid – check, add if necessary					•				•			
Dust and Pollen Filter – replace			•		•		•		•		•	
Headlights – inspect, adjust if necessary			•		•		•		•		•	
Sliding Roof – clean, lubricate rails			•		•		•		•		•	
Air Cleaner – replace filter element					•				•			
Spark Plugs – replace (except allroad 4.2L)					•				•			
Spark Plugs – replace (allroad 4.2L)							•					
Ribbed Belt – replace									•			
Ribbed Belt – check**												•
Timing Belt – replace** ***												•
Timing Belt and Tensioner Roller – replace*												•

Brake Fluid – replace every 2 years, regardless of mileage.

*2.7L

**3.0L

***4.2L



2003 Maintenance Schedule A8/S8

	Miles Kilometers	10 15	20 30	30 45	40 60	50 75	60 90	70 105	80 120	90 135	100 150	105 155
Engine Oil – change		•	•	•	•	•	•	•	•	•	•	
Engine Oil Filter – replace		•	•	•	•	•	•	•	•	•	•	
Engine – check for leaks			•		•		•		•		•	
Cooling System – check level, add if necessary		•	•	•	•	•	•	•	•	•	•	
Exhaust System – check for damage, leaks		•	•	•	•	•	•	•	•	•	•	
Engine OBD – check memory, purge		•	•	•	•	•	•	•	•	•	•	
Door Hinge Mechanisms – lubricate		•	•	•	•	•	•	•	•	•	•	
Battery – check electrolyte, add if necessary		•	•	•	•	•	•	•	•	•	•	
Wiper/Washer – check fluid, add if necessary		•	•	•	•	•	•	•	•	•	•	
Automatic Shift Lock – check		•	•	•	•	•	•	•	•	•	•	
Tires and Spare – check condition, pressure		•	•	•	•	•	•	•	•	•	•	
Service Reminder Display – reset		•	•	•	•	•	•	•	•	•	•	
Brake System – check		•	•	•	•	•	•	•	•	•	•	
Drive Shaft Boots – check		•	•	•	•	•	•	•	•	•	•	
Road Test		•	•	•	•	•	•	•	•	•	•	
Lights – check		•	•	•	•	•	•	•	•	•	•	
Front Axle – check dust seals, ball joints, tie-rod ends			•		•		•		•		•	
Automatic Transmission – check for leaks			•		•		•		•		•	
Automatic Transmission Final Drive – check for leaks					•				•		•	
Power Steering Fluid – check, add if necessary					•				•			
Dust and Pollen Filter – replace			•		•		•		•		•	
Headlights – inspect, adjust if necessary			•		•		•		•		•	
Sliding Roof – clean, lubricate rails			•		•		•		•		•	
Air Cleaner – replace filter element					•				•			
Spark Plugs – replace					•				•			
Timing Belt – replace												•
Ribbed Belt – replace									•			

Brake Fluid – replace every 2 years, regardless of mileage.



2003 Maintenance Schedule TT

	Miles	10	20	30	40	50	60	70	80	90	100	105
Kilometers		16	32	48	64	80	96	112	128	144	160	170
Engine Oil – change		•	•	•	•	•	•	•	•	•	•	
Engine Oil Filter – replace		•	•	•	•	•	•	•	•	•	•	
Engine - check for leaks			•		•		•		•		•	
Cooling System – check level, add if necessary		•	•	•	•	•	•	•	•	•	•	
Exhaust System – check for damage, leaks		•	•	•	•	•	•	•	•	•	•	
Engine OBD – check memory, purge		•	•	•	•	•	•	•	•	•	•	
Door Hinge Mechanisms – lubricate		•	•	•	•	•	•	•	•	•	•	
Battery – check electrolyte, add if necessary		•	•	•	•	•	•	•	•	•	•	
Wiper/Washer– check fluid, add if necessary		•	•	•	•	•	•	•	•	•	•	
Automatic Shift Lock - check		•	•	•	•	•	•	•	•	•	•	
Manual Transmission – check shift and interlock												
		•	•	•	•	•	•	•	•	•	•	
Tires & Spare – check condition, pressure		•	•	•	•	•	•	•	•	•	•	
Service Reminder Display– reset		•	•	•	•	•	•	•	•	•	•	
Brake System – check		•	•	•	•	•	•	•	•	•	•	
Drive Shaft Boots – check		•	•	•	•	•	•	•	•	•	•	
Road Test		•	•	•	•	•	•	•	•	•	•	
Lights – check		•	•	•	•	•	•	•	•	•	•	
Front Axle – check dust seals, ball joints, tie rod ends			•		•		•		•		•	
Haldex Clutch – change oil and filter			•		•		•		•		•	
Automatic Transmission – check for leaks			•		•		•		•		•	
Manual Transmission - check for leaks			•		•		•		•		•	
Manual Transmisson Final Drive – check for leaks			•		•		•		•		•	
Power Steering Fluid – check, add if necessary					•				•			
Dust/Pollen Filter – replace			•		•		•		•		•	
Headlights – inspect, adjust if necessary			•		•		•		•		•	
Air Cleaner – replace filter element					•				•			
Spark Plugs – replace					•				•			
Timing Belt – replace												•
Ribbed Belt – check												•
Timing Belt – inspect*					•				•			

Brake Fluid - replace every 2 years, regardless of mileage.
*TT 1.8L every 40,000 miles